


"Pro Lite" PARTS LISTING

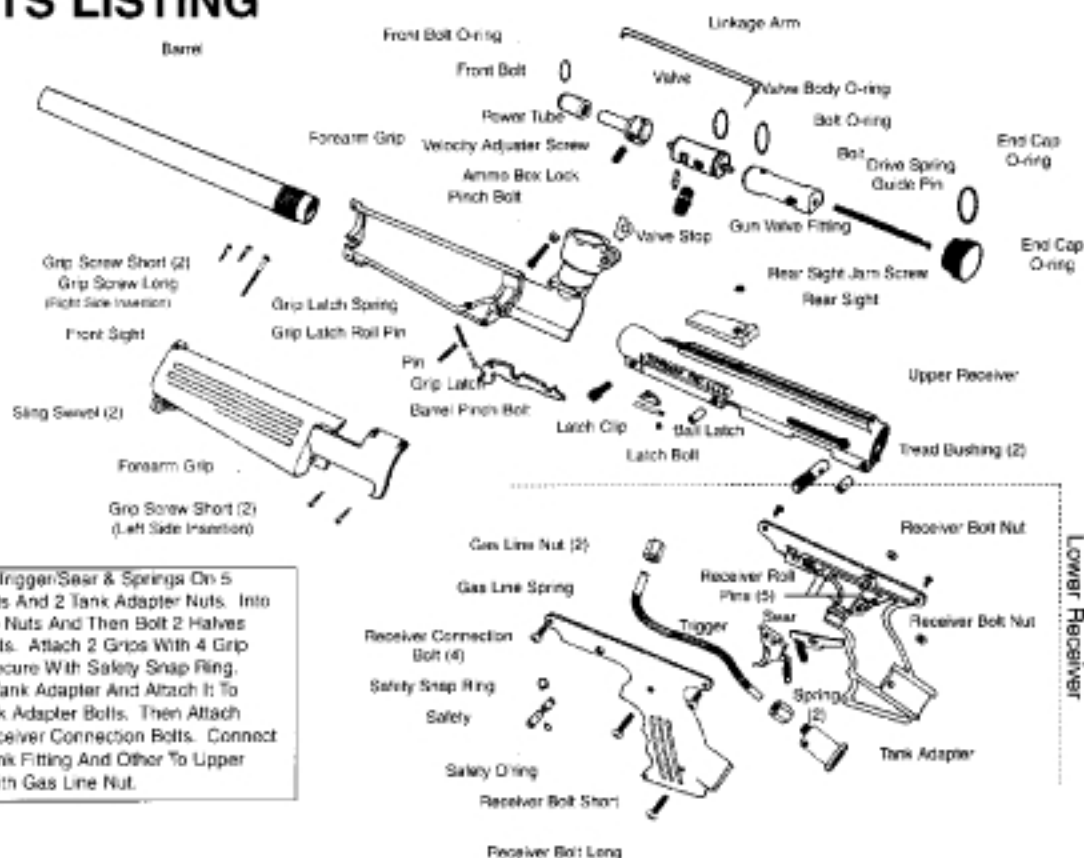

Into Right Lower Receiver Half. Insert Trigger/Sear & Springs On 5 Receiver Dowel Pins. Insert 2 Grip Nuts And 2 Tank Adapter Nuts. Into Left Lower Receiver Half; Insert 2 Grip Nuts And Then Bolt 2 Halves Together With 2 Receiver Bolts And Nuts. Attach 2 Grips With 4 Grip Bolts. Insert Safety With O-ring And Secure With Safety Snap Ring. Insert 90 degree Gas Line Fitting Into Tank Adapter And Attach It To Bottom Of Lower Receiver Using 2 Tank Adapter Bolts. Then Attach Lower And Upper Receivers With 4 Receiver Connection Bolts. Connect One End Of Gas Line To 90 Degree Tank Fitting And Other To Upper Receiver Gun Valve Gas Line Fitting With Gas Line Nut.

Part #	Description
P/L-G	Forearm Grip.....
PL-42A	Forearm Grip Screw (short).....
PL-42B	Forearm Grip Screw (long).....
PL-43A	Forearm Grip Latch Spring Pin.....
P/L-L	Lower Receiver Complete.....
PL-01A	Lower Receiver Bolt (short).....
PL-01B	Lower Receiver Bolt (long).....
9-PA	Receiver Bolt Nut.....
PL-08	Tank Adapter.....
PL-02A	Thread Bushing.....
PL-01C	Receiver Bolt.....
PL-03	Upper Receiver.....
PL-36	Receiver Roll Pins.....
PA-03	Rear Sight.....
PA-04	Rear Sight Jam Screw.....
PA-25B	Valve Stop.....
PA-25N	Valve Body (no internals).....
PA-31	Valve Pins.....
PL-PL	Valve Plunger (long).....
PL-PS	Valve Plunger (short).....
PA-27	Valve Seal.....
PA-32	Valve Spring.....
PA-31A	Valve Snap Ring.....
PA-24	Gun Valve Fitting.....
SL2-25	Valve Seat O-ring.....
PA-12	Valve Body O-ring.....
PA-VN	Gun Valve Assembly Complete.....
PA-17N	Front Bolt.....
PA-11	Bolt.....
PA-13	Bolt Handle.....
15-SP	Bolt Drive Spring.....
PA-15	Bolt Drive Spring Guide Pin.....
PA-12	Bolt O-ring.....

Part #	Description
CA-40	Barrel Pinch Bolt.....
PA-39	Barrel 10.5".....
FA-17	Front Bolt O-ring.....
SL2-7	Safety Snap Ring.....
PA-37	Safety.....
SL2-6	Safety O-ring.....
PA-20	Latch Bolt.....
PA-19	Latch Clip.....
FA-18	Ball Latch.....
PA-43	Grip Latch.....
PA-44	Grip Latch Spring.....
PL-36	Grip Latch Roll Pin.....
33-A	Trigger.....
PA-34	Trigger/Sear Spring.....
PA-35	Sear.....
PA-09A	Gas Line Spring.....
PA-09	Gas Line.....
PA-10	Gas Line Nut.....
PA-GL	Gas Line Kit.....
PA-05	End Cap.....
PA-05A	End Cap Buffer.....
22-SP	End Cap O-ring.....
PA-BN	Power Tube.....
PA-22	Velocity Adjuster Screw.....
PA-16	Linkage Arm.....
PL-42E	Ammo Box Lock.....
PL-42C	Ammo Box Pinch Bolt.....
PL-42D	Ammo Box Pinch Bolt Nut.....
PA-0	O-ring Kit.....
30-PA	Allen Wrench 3/16".....
PA-50A	Allen Wrench 1/8".....
PL-47	Manual.....